CV-54B

HDMI over Coaxial Extender with Bi-directional IR Pass-through

User Manual























Made in Taiwan



The CV-54B HDMI over Coaxial Extender with Bi-directional IR Pass-through has been tested for conformance to safety regulations and requirements, and has been certified for international use. However, like all electronic equipments, the CV-54B should be used with care. Please read and follow the safety instructions to protect yourself from possible injury and to minimize the risk of damage to the unit.

- Follow all instructions and warnings marked on this unit.
- Do not attempt to service this unit yourself, except where explained in this manual.
- Provide proper ventilation and air circulation and do not use near water.
- Keep objects that might damage the device and assure that the placement of this unit is on a stable surface.
- Use only the power adapter and power cords and connection cables designed for this unit.
- Do not use liquid or aerosol cleaners to clean this unit. Always unplug the power to the device before cleaning.



TABLE OF CONTENTS

INTRODUCTION	1
FEATURES	1
PACKAGE CONTENTS	1
SPECIFICATIONS	2
PANEL DESCRIPTIONS	3
Transmitting unit ► CV-54B-TX	3
Receiving unit ► CV-54B-RX	4
IR PASS-THROUGH	5
HDMI PIN DEFINITION	6
COAXIAL CABLE	6
NOTICE	7
CONNECTION DIAGRAM	7
WARRANTY	8

INTRODUCTION

SPECIFICATIONS

The CV-54B HDMI over Coaxial Extender with Bi-directional IR Pass-through boosts up your HDMI transmission range up to 100m (330ft) in HDTV 1080p format. CV-54B is easy to install and works perfectly with the RGBHV or RG-6 coaxial cables. Coaxial cables are typically used for VGA or component signals, and provide the audio/video professionals with remarkable flexibility. Built with IR pass-through extension, users can control the remote HDMI source devices such as Blu-ray Disc players instantly at the display site. Embedded with bi-directional HDCP mechanism, high definition HDMI content is secured from piracy.

The CV-54B includes two units: transmitting (CV-54B-TX) and receiving (CV-54B-RX) units. The transmitting unit is used to capture the HDMI/DVI, HDCP and IR input signals and carry the signals through five coaxial cables. The receiving unit is responsible for equalizing the transmitted HDMI multimedia data and extracting HDCP and IR data. The transmission range between the sending and receiving units can be up to 100m (330ft) under Full HD (1080p) with 7.1 channel audio. With CV-54B installation, current analog A/V based distribution systems can be upgraded to become pure high quality and future-proof HDMI supported system cost effectively.

FEATURES

- Support HDMI Deep Color and DVI 1.0 compliant
- HDCP 1.1 compliant
- Supports 7.1-channel DTS-HD Master Audio and Dolby TrueHD high bitrate audio
- Supports Deep Color x.v.Color (xvYCC)
- Extends the transmission range up to 100m (330ft) from the HDMI sources under Full HD resolution (1080p60 36-bit color depth)
- 48-bit color depth
- Supports embedded bi-directional IR pass-through and Consumer Electronics Control (CEC) channel
- Supports Video resolutions up to WQXGA (2560x1600@60Hz or 1920x1200@75Hz) or HDMI video up to 1080p@36 bit RGB/YCbCr
- Supports VESA DDC and Hot-Plug Detect (HPD)



The claimed transmission distance here is subject to the grade of installed cable(s), source device and display.

For over Cat.X/COAX transmission, the cable(s) has to be solid, not stranded. Any keystone jack along the transmission path will kill the transmission performance significantly!

PACKAGE CONTENTS

• 1x CV-54B [TX & RX]

• 2x DC 5V 2A wall wart

1x IR blaster

1x IR receiver


1x User Manual

Model Name		CV-54B		
Technical		CV-54B[Tx]	CV-54B[Rx]	
Role of usag	е	Transmitter [TX]	Receiver [RX]	
HDMI compli	ance	HDMI Deep Color		
HDCP compl	liance	Yes		
Video bandw	ridth	Single-link 340MHz [10.2Gbps]		
Video suppor	rt	480i / 480p / 720p / 1080i / 1080p60 / 1920x1200@75 / 2560x1600@60 up to 48-bit color		
Audio suppor	rt	Surround sound (up to 7.1ch) or stereo digital audio		
HDMI over Coax transmission range		Full HD (Deep Color) [1080p 24/36-bit color] – 100m [330ft]		
HDMI Equali:	zation	N/A	Auto	
Input TMDS signal		1.2 Volts [peak-to-peak]		
Input DDC signal		5 Volts [peak-to-peak, TTL]		
ESD protection		[1] Human body model — ±19kV [air-gap discharge] & ±12kV [contact discharge] [2] Core chipset — ±8kV		
PCB stack-up		4-layer board [impedance control	— differential 100Ω; single 50Ω]	
Input		1x HDMI + 1x 3.5mm	5x BNC + 1x 3.5mm	
Output		5x BNC + 1x 3.5mm	1x HDMI + 1x 3.5mm	
IR remote control		Electro-optical characteristics: $\pi = 25^{\circ}$ /Carrier frequency: 20-60kHz		
HDMI connector		Type A [19-pin female]		
BNC connec	tor	75Ω interlocking socket		
3.5mm conne	ector	3.5mm earphone jack for IR blaster and reciever to control HDMI device		
Mechanical				
Housing		Metal enclosure		
	Model	[TX/RX] 98 x 69 x 27mm [3.9" x 2.7" x 1.1"]		
Dimensions [L x W x H]	Package	175 x 270 x 80mm [6.9" x 10.6" x 3.1"]		
	Carton	450 x 370 x 300mm [1'6" x 1'3" x 11.8"]		
10/a:ala4	Model	247g [8.7 oz]		
Weight	Package	1350g [3.0 lbs]		
Fixedness		Interlocking power supply & wall-mount case with screws		
Power supply		5V 2A DC		
Power consumption		3 Watt [max]		
Operation temperature		0~40°C [32~104°F]		
Storage temperature		-20~60°C [-4~140°F]		
Relative hum	nidity	20~90% RH [no condensation]		
		<u>-</u>		

PANEL DESCRIPTIONS


Transmitting unit ► CV-54B-TX

Front Panel

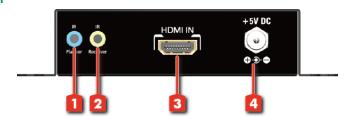

- 1. IR Flasher: 3.5mm socket for plugging in the extension cable of IR flasher
- 2. IR Receiver: 3.5mm socket for plugging in the extension cable of IR receiver
- 3. HDMI IN: connect to a HDMI source device with a HDMI male-male cable
- 4. +5V DC: connect to 5V DC power supply unit


Rear Panel

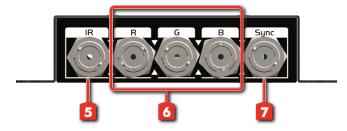

- 5. IR BNC: Connect to the same IR BNC jacks on the receiving unit respectively.
- 6. R, G, B BNC: Connect to the same R, G, B BNC jacks on the receiving unit respectively.
- 7. Sync BNC: Connect to the same Sync. BNC jacks on the receiving unit respectively.

Receiving unit ► CV-54B-RX

Front Panel



- 8. IR Flasher: 3.5mm socket for plugging in the extension cable of IR flasher
- 9. IR Receiver: 3.5mm socket for plugging in the extension cable of IR receiver
- 10. HDMI OUT: connect to a HDMI display with a HDMI male-male cable
- 11.+5V DC: connect to 5V DC power supply unit

Rear Panel



- 12.IR BNC: Connect to the same IR BNC jacks on the transmitting unit respectively.
- 13.R, G, B BNC: Connect to the same R, G, B BNC jacks on the transmitting unit respectively.
- 14. Sync BNC: Connect to the same Sync. BNC jacks on the transmitting unit respectively.

IR PASS-THROUGH

HDMI PIN DEFINITION

IR Extenders




IR Sockets


- **IR BLASTER:** plug in the IR blaster to emit all IR command signals received from the IR receiver from the other enf to control the devices corresponding to the IR signals.
- **IR RECEIVER:** plug in the IR receiver to receive all IR command signals from the IR remote controls of the corresponding devices.


CAUTION!

Incorrect placement of IR Blaster and Receiver may result in the failure of the IR extenders. Please check carefully before plugging in the IR extender to the respective IR sockets. Warranty will not cover the damage.

Definition of IR Earphone Jack







Type A (Receptacle) HDMI

Pin 1	TMDS Data2+	Pin 11	TMDS Clock Shield
Pin 2	TMDS Data2 Shield	Pin 12	TMDS Clock-
Pin 3	TMDS Data2-	Pin 13	NC
Pin 4	TMDS Data1+	Pin 14	Reserved (N.C. on device)
Pin 5	TMDS Data1 Shield	Pin 15	SCL
Pin 6	TMDS Data1-	Pin 16	SDA
Pin 7	TMDS Data0+	Pin 17	DDC/CEC Ground
Pin 8	TMDS Data0 Shield	Pin 18	+5V Power
Pin 9	TMDS Data0-	Pin 19	Hot Plug Detect
Pin 10	TMDS Clock+		

COAXIAL CABLE

Reference for Coaxial Cables

MHz	dB loss per 100ft	dB loss per 330ft
30	0.105	0.346
50	0.243	0.799
450	0.439	1.440
1500	0.855	2.840
2000	1.020	3.360
2500	1.170	3.840


MHz	dB loss per 100ft	dB loss per 330ft
50	1.45	4.756
100	2.02	0.799
200	2.83	1.440
400	4.05	2.840
700	5.60	3.360
800	6.23	
1000	6.59	
1200	7.50	
1450	8.10	
1800	8.95	
2200	9.98	3.840

NOTICE WARRANTY

- Incorrect placement of IR Blaster and Receiver may result in the failure of the IR extenders. Please
 check carefully before plugging in the IR extender to the respective IR sockets. Warranty will not cover
 the damage.
- All HDMI transmission distances are measured using Belden 7789A coaxial cables and ASTRODESIGN Video Signal Generator VG-859C & VG-870B. The lab testing result shows that 5 RG-6 coaxial cables can transmit 1080p 60 signalsuo to 80m (260ft).

CONNECTION DIAGRAM



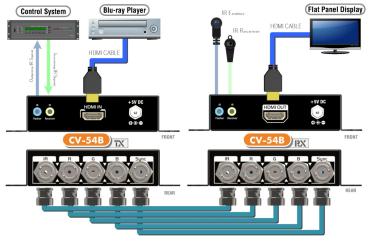

The SELLER warrants the CV-54B HDMI over Coaxial Extender with Bi-directional IR Pass-through free from defects in the material and workmanship for 1 year from the date of purchase from the SELLER or an authorized dealer. Should this product fail to be in good working order within 1 year warranty period, The SELLER, at its option, repair or replace the unit, provided that the unit has not been subjected to accident, disaster, abuse or any unauthorized modifications including static discharge and power surge. This warranty is offered by the SELLER for its BUYER with direct transaction only. This warranty is void if the warranty seal on the metal housing is broken.

Unit that fails under conditions other than those covered will be repaired at the current price of parts and labor in effect at the time of repair. Such repairs are warranted for 90 days from the day of reshipment to the BUYER. If the unit is delivered by mail, customers agree to insure the unit or assume the risk of loss or damage in transit. Under no circumstances will a unit be accepted without a return authorization number.

The warranty is in lieu of all other warranties expressed or implied, including without limitations, any other implied warranty or fitness or merchantability for any particular purpose, all of which are expressly disclaimed.

Proof of sale may be required in order to claim warranty. Customers outside Taiwan are responsible for shipping charges to and from the SELLER. Cables and power adapters are limited to a 30 day warranty and must be free from any markings, scratches, and neatly coiled.

The content of this manual has been carefully checked and is believed to be accurate. However, The SELLER assumes no responsibility for any inaccuracies that may be contained in this manual. The SELLER will NOT be liable for direct, indirect, incidental, special, or consequential damages resulting from any defect or omission in this manual, even if advised of the possibility of such damages. Also, the technical information contained herein regarding the **CV-54B** features and specifications is subject to change without further notice.